


**NB. This chart is from the
Resene historical file.
Please refer to current
Resene colour charts
for the latest colour options**

Resene colorwood WOOD/STAIN



Coloured timber with the see through look

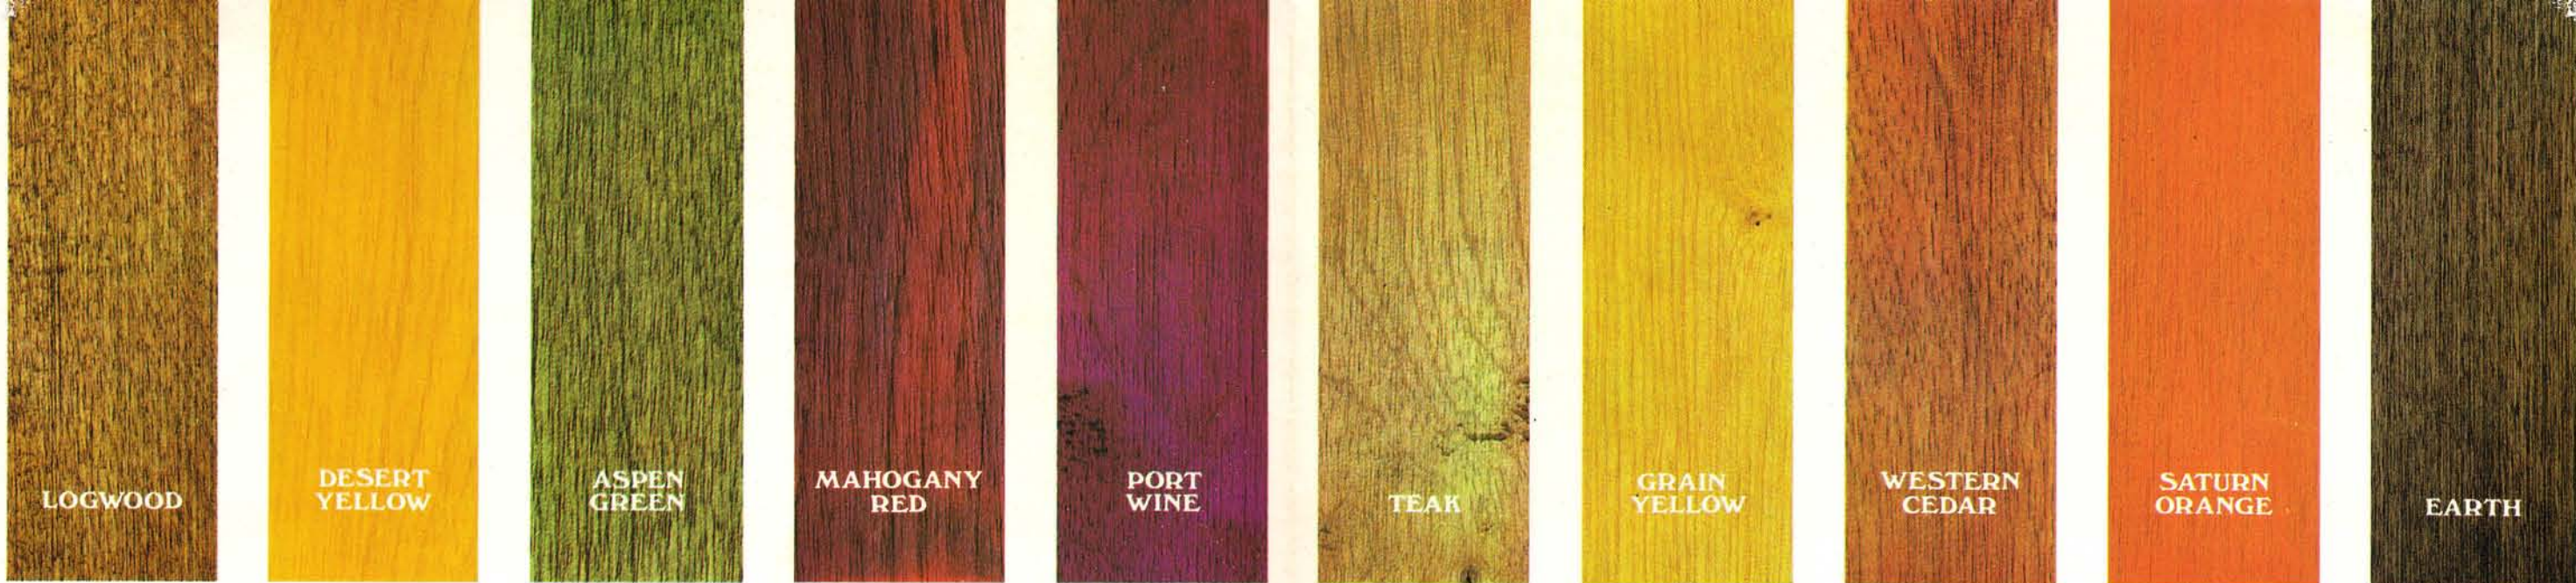

Resene colorwood

WOOD/STAIN

RESENE COLORWOOD is the new, exciting way of treating natural timbers and enhancing the grain. COLORWOOD gives you coloured timbers with the see-through look. COLORWOOD is available in these 20 fabulous shades, which are suitable for all native and imported timbers. The colours shown on this chart are on New Zealand Tawa. Colours can be intermixed to give a much wider range of colours.





It is important that COLORWOOD is tested on a timber off-cut or section of the job that is not seen, to ensure that it is the desired finish, as the finished colour is influenced by the colour of the timber itself.

If the colour is too strong, reduce with Colorwood Reducing Thinner.

It should be noted when using light-and-bright colours, best results are obtained by using pale-coloured timbers. Dark timbers may show darker than the required finish.

DIRECTIONS:

Ensure surface is well sanded with fine paper and dust down.

(1) Putty all nail holes:-
Mix a little of the Colorwood in the required colour with linseed oil putty.

(2) Apply Colorwood by brush or cloth. Brush well into surface or, if using a cloth, apply generously rubbing in with a circular motion.

The colour strength is also determined by the time the stain is left before the excess is wiped. This will vary between dense and absorbent timbers. The stain can be left for 3 minutes for a pale shade, and up to 10 to 15 minutes for full-strength colour.

Wipe excess with dry cloth along the grain.

(3) Allow 12 hours dry time before re-coating with Colorwood Polyurethane Top-coat.

Allow 5 hours to dry.

(4) Sand down with fine paper and apply final coat Colorwood Top-coat.

Colorwood Polyurethane Top-Coats are available in Poly-Satin and Poly-Gloss. Colorwood is available in $\frac{1}{4}$ gals and $\frac{1}{16}$ gals tins.

$\frac{1}{4}$ Gals Colorwood covers approx. 200 sq. ft.

Ensure that only Poly-Satin or Poly-Gloss is used over Colorwood.

Resene colorwood



WOOD/STAIN